



NEW EQUIPMENT WARRANTY

We warrant that this equipment from U.S. Stoneware Corporation is within stated specifications and is free from defects in materials and workmanship.

Our obligation under this warranty is limited to repairing or replacing F.O.B. our factory and defective parts in this product that to our satisfaction existed at time of shipment, provided the purchaser gives us written notice immediately upon discovery thereof, or in any event within one year from time of shipment.

Our warranty does not cover work or replacement of parts made necessary by carelessness, misuse, accident or by incidents which occur outside of use of the instrument such as water damage, lightning, etc. U.S. Stoneware's liability under this warranty shall not exceed the cost of correcting defects whether it is the correction of the defects or the replacement of the product. Claims based on any defect must be made in writing within 30 days of the purchaser's becoming aware of that defect for this warranty to apply. U.S. Stoneware assumes no liability for consequential or special damages in connection with this contract.

U.S. Stoneware shall have no liability for damages of any kind arising from the installation and / or use of this equipment by anyone. The purchaser, by the acceptance of this equipment, will assume all liability for any damages which may result from its use or misuse.

This is our sole warranty with respect to this equipment. We make no other warranty of any kind whatever, express or implies, and all implied warranties of merchantability and fitness for a particular purpose which exceeds the above obligations are hereby disclaimed by U.S. Stoneware Corporation.




~ Voltage Requirement Notice ~

This machine is listed for 230 volt single phase input.

It will accept +/- 15% of the listed input voltage.

It is also capable of accepting 50 or 60 Hz input.

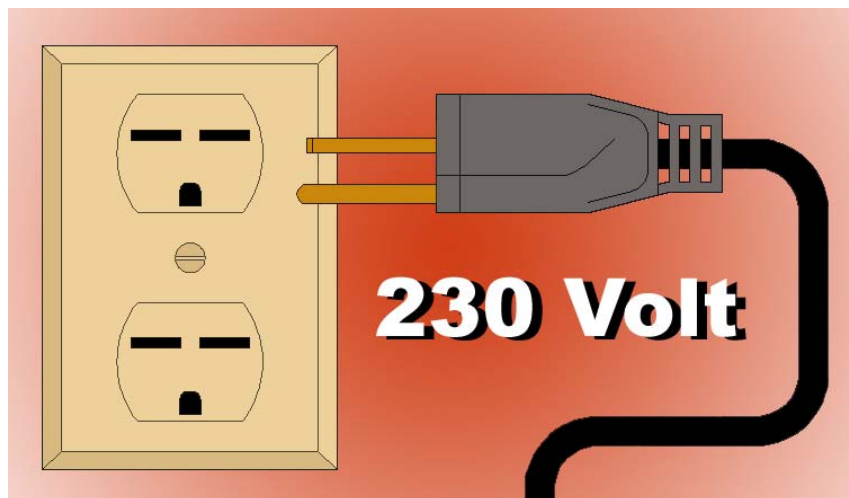



**INSTRUCTIONS FOR INSTALLATION,
USE AND MAINTENANCE OF
755 RMV JAR MILL**

INSTALLATION:

- * After placing machine in the desired location, position the machine so the rolls are level. (Leveling feet are provided for this purpose)
- * Line cords are furnished for 115 or 230 volt, single phase AC power supply. (Note: Machine controls are compatible for 50 or 60 Hz. operation)

Note: Motor rotation should be such that the top of drive roll turns toward the jar being turned. (CW rotation when viewed from drive end of roller)

OPERATION:

- * Adjust idle roll by lifting up and placing in desired slot. Roller should fit tight into the slots. If required; use a small rubber mallet to bump the idle roller in or out of the desired setting. Refer to the enclosed graph for jar diameter vs. roll spacing to assure optimum performance.
- * Roller speed is controlled by the speed pot on the front of the machine. Refer to the enclosed chart to determine the setting for desired roller speed.

LUBRICATION:

- * The motor and bearings are lubricated for life.
- * Speed Reducer: Oil changes are not required. Oil should only be replaced when maintenance is performed that requires disassembly. If the oil is replaced, use Mobil SHC634 or equivalent.

MAINTENANCE:

- * Drive belt: Keep free of oil & grease. Tension can be adjusted by sliding the motor and reducer in their respective slots. Keep timing pulleys in alignment.
- * Motor brushes: Remove and inspect motor brushes at least twice a year.
- * Roller bearings: Inspect and tighten as needed 3 - 4 times a year.




REPLACEMENT PARTS:

- * Parts can be identified by referring to the assembly drawing.
- * Please furnish part number, part description, and serial number of the machine when ordering replacement parts.

Thank you for purchasing a quality U.S. Stoneware product!

ARROWS INDICATE THE PROPER
ROTATION FOR THE DRIVE ROLLER
ON ALL JAR MILL MODELS.

IF THE ROLLER IS TURNING IN THE
OPPOSITE DIRECTION THE MACHINE
WILL HAVE THE TENDENCY TO
"THROW" THE VESSEL BEING TURNED,
OR EXCESSIVE "WALKING" OF THE
VESSEL WILL OCCUR.

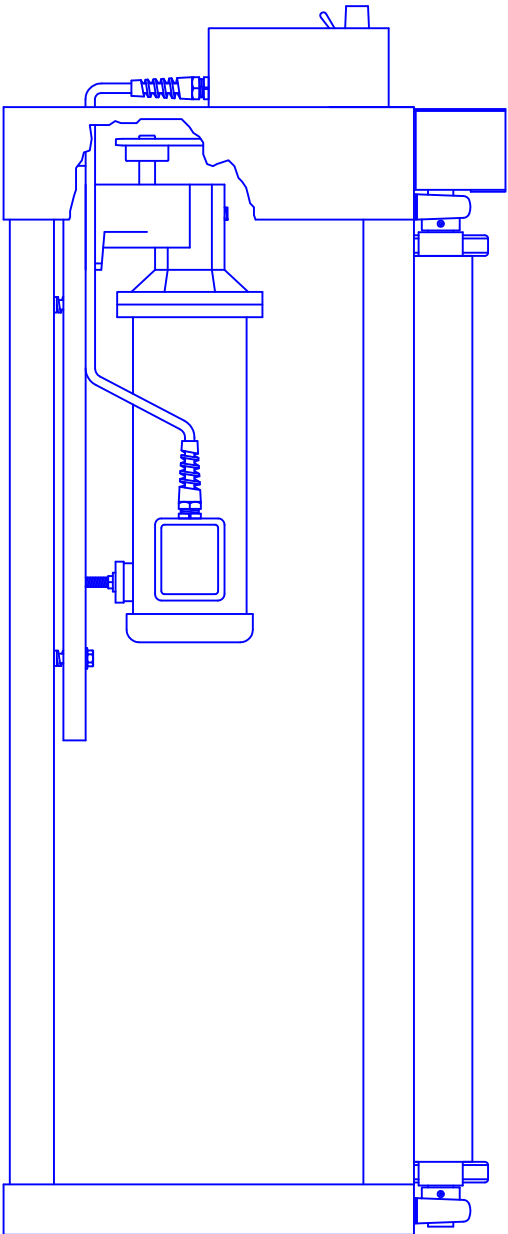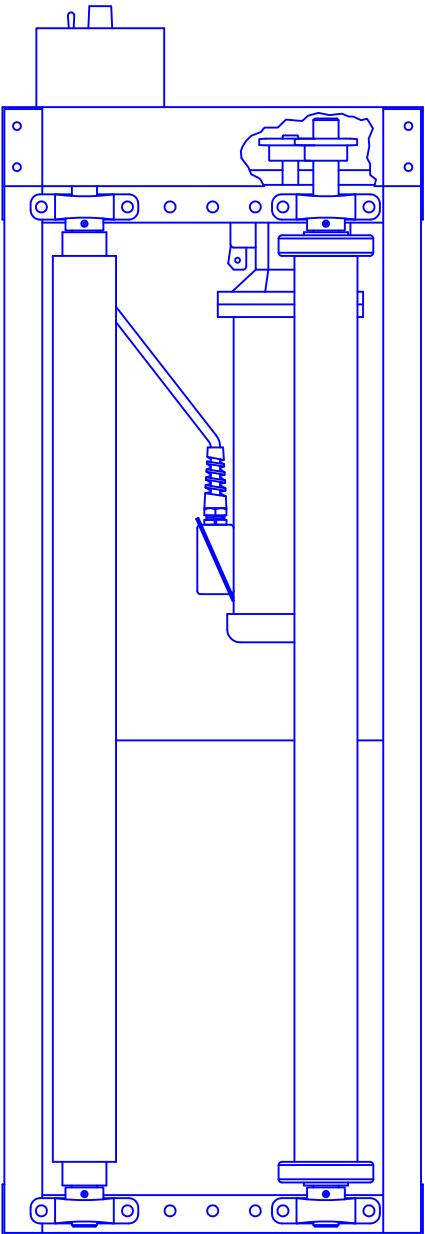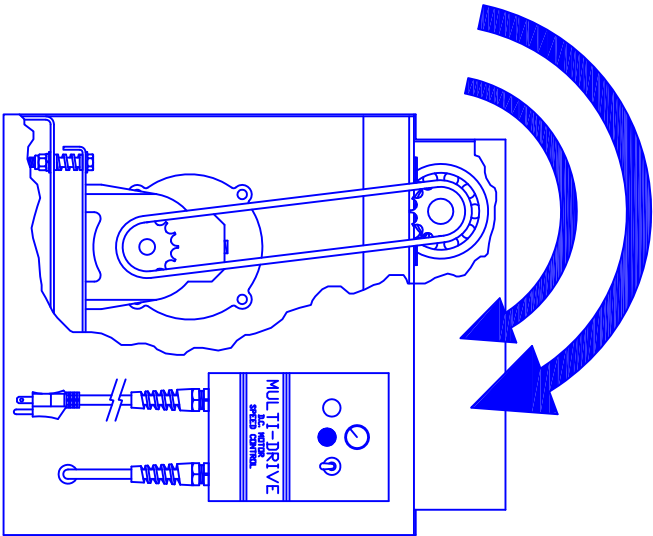

THIS DRAWING IS THE PROPERTY OF
U.S. STONWARE
600 EAST CLARK STREET
EAST PALESTINE, OHIO 44413

SCALE: N/A

DRAWING OF:
CORRECT DRIVE ROTATION
FOR ALL JAR MILLS

DATE: 10/30/2008	DATE: XXXX	DATE: 10/30/2008
DESIGNED BY: G.L.G.	DESIGNED BY: XXXX	DESIGNED BY: XXXX
CHECKED BY: XXXX	CHECKED BY: XXXX	CHECKED BY: XXXX
APPROVED BY: XXXX	APPROVED BY: XXXX	APPROVED BY: XXXX

MANUFACTURING STANDARDS

ALL WELDS TO CONFORM TO AWS D1.1-LATEST REVISION

UNTOLERANCED FABRICATED DIMENSIONS

PROPRIETARY NOTICE

THE SUBJECT AND MATERIALS SHOWN ARE
EXCLUSIVELY THE PROPERTY OF U.S. STONWARE
AND ARE NOT TO BE REPRODUCED OR
UTILIZED IN WHOLE OR PART OR ANY UNAUTHORIZED
UTILIZATION IS STRICTLY PROHIBITED
WITHOUT SPECIFIC WRITTEN PERMISSION.

X = +.020

.XX = +.010


.XXX = +.005

FRACTIONS = +1/32


ANGLES = +1/2

755 RMV SERIES JAR MILL


ROLLER POSITIONS

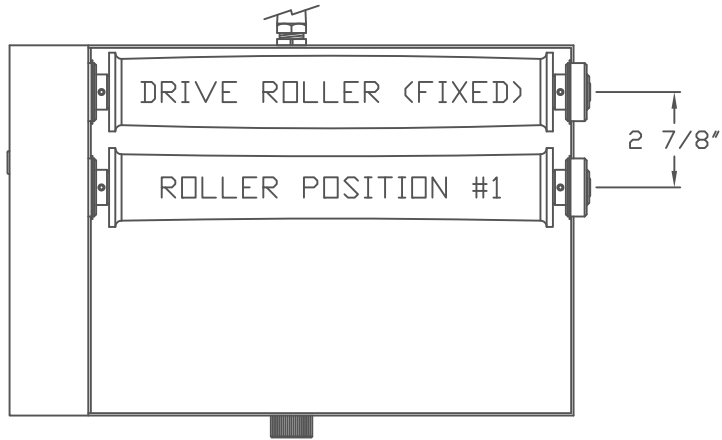

SUGGESTED JAR
DIAMETERS $2 \frac{1}{2}" - 4"$

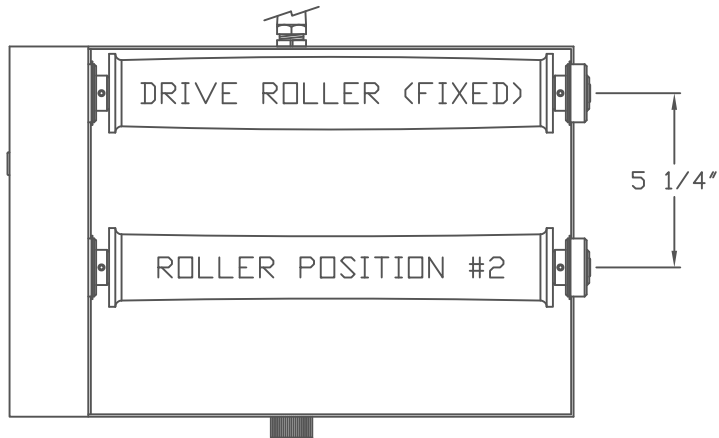

SUGGESTED JAR
DIAMETERS $4" - 7"$

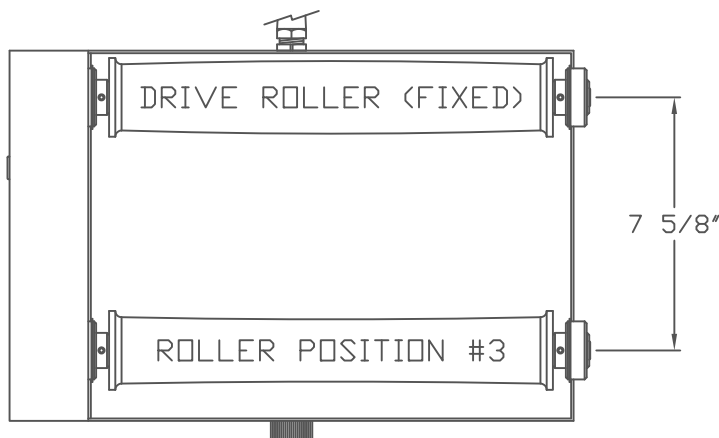

SUGGESTED JAR
DIAMETERS $7" - 10"$



**Approximate Roller Speed Settings
For 700 Series Jar Mills**

<i>Dial Position</i>	<i>R.P.M.</i>
0	20
5	28
10	41
15	54
20	69
25	81
30	94
35	106
40	121
45	137
50	155
55	174
60	190
65	205
70	220
75	233
80	247
85	260
90	276
95	290
100	300



**Recommended Jar / Roller Speeds
For Optimum Grinding Efficiency**

Jar Model & Size	Recommended Jar Speed	Roll Speed (700 Series)	Roll Speed (800 Series)
774 – 000	106.46	180	144
774 – 00	77.14	222	177
774 – 0	75.28	235	188
774 – 1	60.98	274	220
774 – 2	54.54	300	240
774 – 3	49.79	N/A	259
774 – 4	46.10	N/A	277
774 – 6	46.10	N/A	277
773 – 00	75.28	240	192
773 – 1	60.98	288	230
773 – 3	51.14	N/A	266
611 – 00	72.63	218	174
611 – 0	72.63	218	174
611 – 1	62.39	250	200
611 – 2	55.56	278	222
611 – 3	55.56	278	222
611 – 4	50.56	N/A	243
611 – 6	46.70	N/A	262
612 – 00	72.92	229	183
612 – 0	72.92	229	183
612 – 1	62.59	261	209
612 – 2	55.69	284	227

774 – Roalox




773 – High Alumina

611 – Stainless Steel

612 – Rubber Lined Carbon Steel Jar

N/A – Jar Size Not Recommended For This Machine

ITEM	QTY.	PART NUMBER	DESCRIPTION
1	1	P90211DC	MACHINE BASE
2	1	EL00033	MOTOR – 1/4 HP. 90V-DC
3	1	P16109	MOTOR BRUSH SET
4	1	P07823DC	REDUCER 5:1 RATIO 56C
5	1	EL00093	D.C. CONTROLLER – 230 VAC IN / 90 VDC OUT
6	2	EL00041	FUSE HOLDER
7	2	EL00040	FUSE MDA 5 AMP
8	1	P05791	GUARD – UPPER DRIVE
9	1	P05792	GUARD – LOWER WITH LOUVERS
10	4	P05402	LEVELING FOOT
11	1	P08143	MOUNTING BRACKET – REDUCER
12	1	P07503	DRIVE ROLLER
13	1	P09302	IDLE ROLLER
14	4	P06507	BEARINGS – 5/8" BORE
15	2	P11300	TIMING PULLEY
16	2	P11302	TAPER BUSHING
17	1	P11304	TIMING BELT
18	1	P06441-P	STRAN RELIEF
19	1	P26314-1	LINE CORD – 230V WITH ROCKER SWITCH
20	1	P08152	CAP PLUG – SMALL

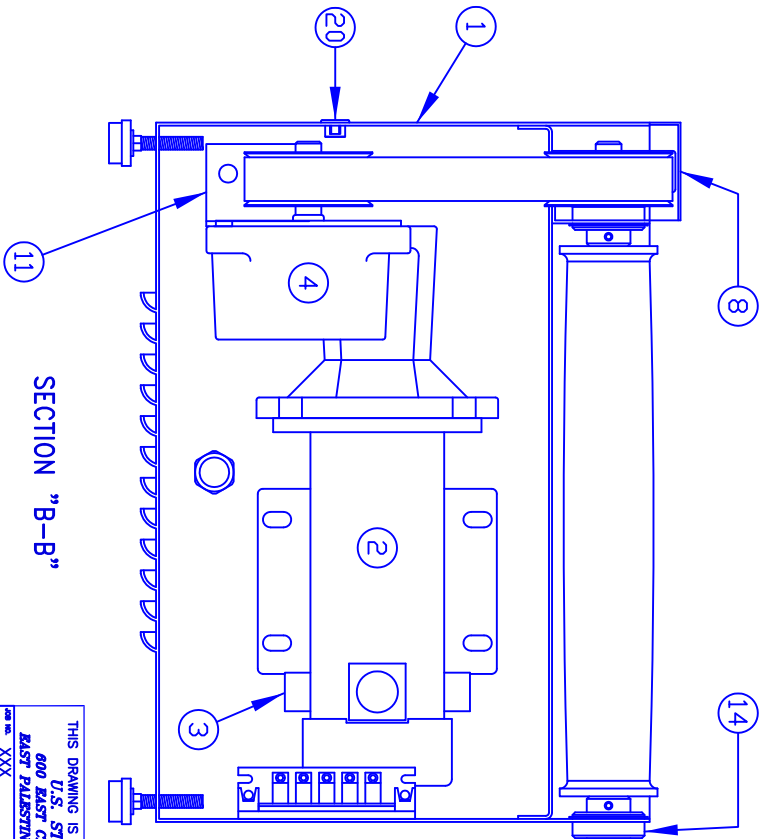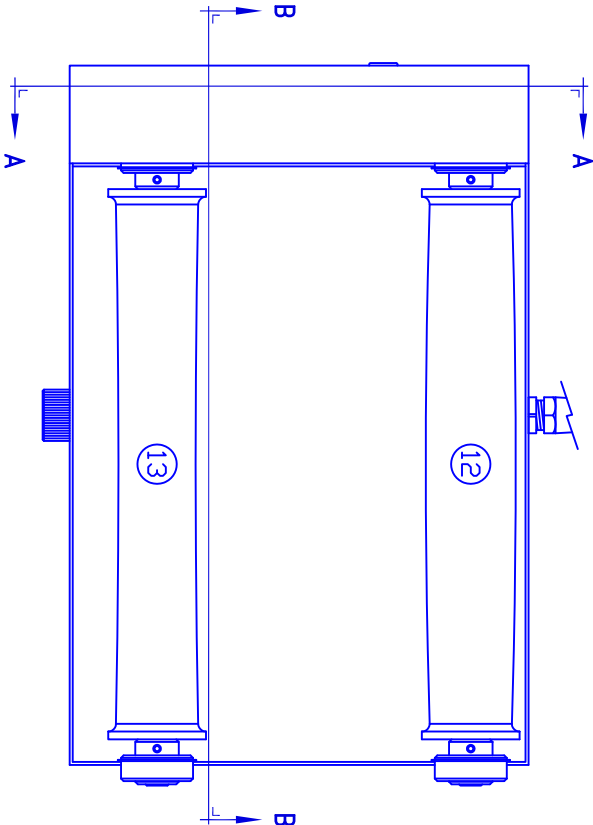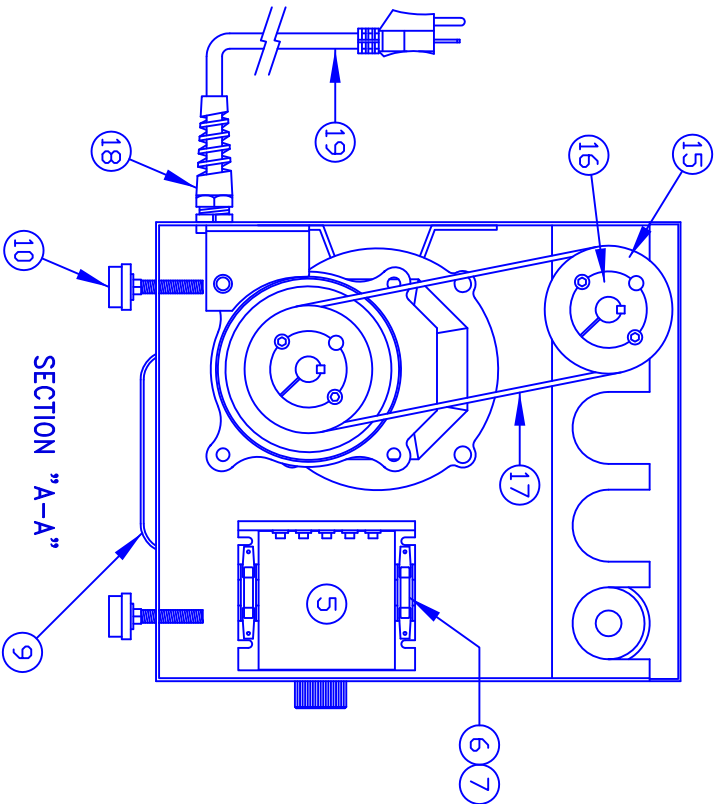


SECTION "A-A"

SECTION "B-B"

MANUFACTURING STANDARDS			
ALL WELDS TO CONFORM TO AWS D1.1-LATEST EDITION			
LIMIT-ENLARGED FABRICATED DIMENSIONS			
PROPRIETARY NOTICE			
X" = ±.020			
XX" = ±.010			
XXX" = ±.005			
THE SUBJECT AND MATERIALS SHOWN ARE			
EXCLUSIVE PROPERTY OF U.S. STONEWARE			
REPRODUCTION OF THE DRAWING IN WHOLE			
OR PART IN ANY MANNER WITHOUT WRITTEN			
PERMISSION IS STRICTLY PROHIBITED			
FRACTIONS = 1/16"			
ANGLES = ±1/2° WITHOUT SPECIFIC WRITTEN PERMISSION			
REV	DATE	BY	DESCRIPTION
REVISION RECORD			
1			
1			

THIS DRAWING IS THE PROPERTY OF:			
U.S. STONEWARE			
600 EAST CLARK STREET			
EAST PALESTINE, OHIO 44413			
SCALE: N/A			
DRAWING OF:			
PART IDENTIFICATION FOR			
755-RMV D.C. DRIVE 230V			
G.L.G.			
DATE: 07/20/2011			
CHECKED BY: XX			
DATE: XXXXXX			
755 PART-ID-230"			
1			
1			

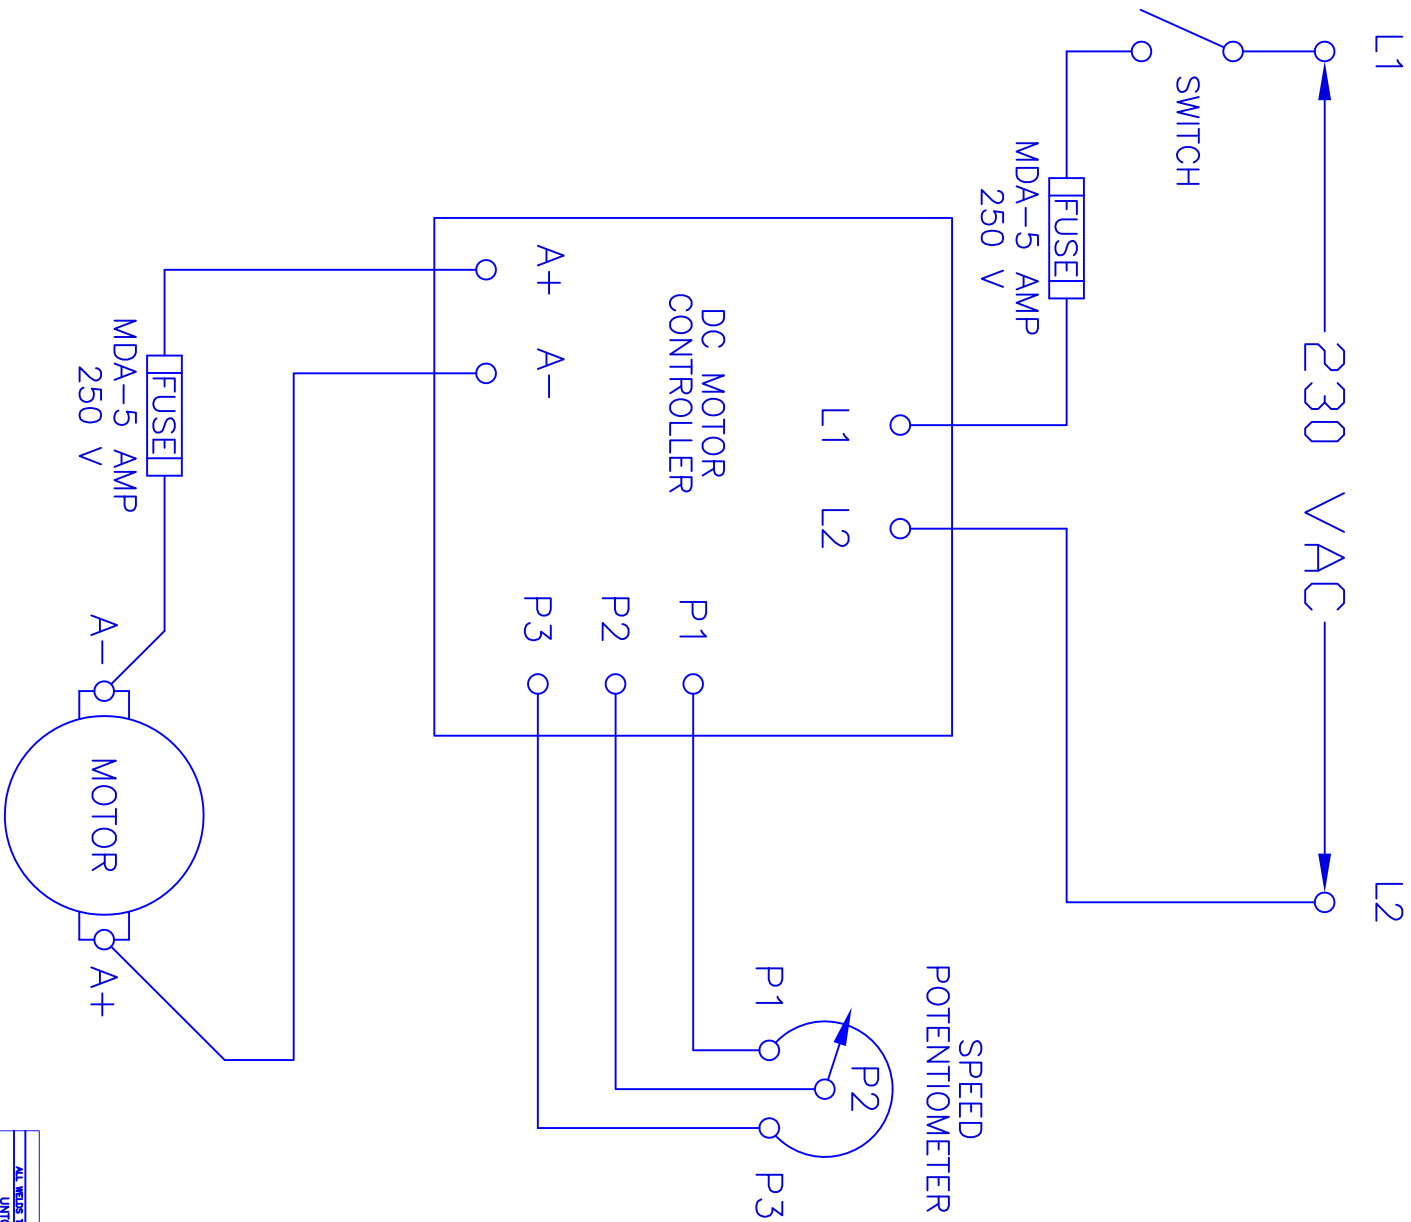

ALL WIRING TO CONFORM TO ANSI D11-1987 EDITION	
UNDOUBLEDGAND FABRICATED DIMENSIONS	
PROPRIETARY NOTICE	
THE SUBSTANCE OF THIS DRAWING IS THE PROPERTY OF U.S. STONERWARE	
COPY REPRODUCTION OF THE DRAWING WITHOUT SPECIFIC WRITTEN PERMISSION	
UTILIZATION IS STRICTLY PROHIBITED	
FUNCTIONS = 41/28	
ANGLES = 41/27	

MANUFACTURING STANDARDS	
SCALE: N/A	
WIRING DIAGRAM OF 755 RMV	
230 VOLT INPUT	
755 WIRE 230V	

THIS DRAWING IS THE PROPERTY OF:	
U.S. STONERWARE	
600 EAST CLARK STREET	
EAST PALM BEACH, FLORIDA 33411	

DRAWN BY: G.L.G.	
DATE: 11/15/2000	
CHECKED BY: XX	
DATE: XXXXXX	
1	



Replacing Brushes in 1/4 HP DC Motors

Note: Depending on model, the motor may have to be removed for accessibility.

- 1.) Locate, and remove the two plastic caps near the rear of the motor. (2 screws each)
- 2.) Slowly remove the plastic screws found under the caps. (1 each side) Screws are under a slight spring tension, take caution as to not lose small parts.
- 3.) Remove brushes and inspect the armature inside the motor for wear or damage.
- 4.) Using a can of compressed air or equivalent, blow out the excessive carbon dust from inside the motor. (Always wear the proper personal protective equipment)
- 5.) Place a new set of brushes in the motor.
- 6.) Carefully replace screws, do not over tighten.
- 7.) Replace the protective caps and secure with the screws.

Worn out brushes will cause the motor to loose power, run intermittently and cause damage to the armature.

Brushes should be checked periodically for wear. (Minimum of twice a year)



Separating C-Face Style Reducers From Motors

Disconnect all electrical power to the machine.

Disconnect wiring to the motor / reducer combination.

Remove the motor / reducer combination from machine base.

Placing the unit on a secure working area, remove the four (4) bolts securing the two units together. (These are the only fasteners holding these parts together)

Holding onto the motor and the reducer bodies, gently rotate and pull the two pieces to break free from each other.

Once the motor and reducer begin to separate, a continued straight line of pull is important to keep the units from binding against each other.

In the event the two parts are, or become stuck or galled together, use two "standard" screwdrivers (180 degrees from each other) to gently and evenly pry the motor and reducer apart.

The use of a penetrating / lubricating spray may be required to assist with the separation of the parts.

KBIC® SCR DC Motor Speed Controls


Ultra Fast
CL Circuit Prevents
Demagnetization in
PM Motors

Installation and
Operation Manual



See **SAFETY WARNING**

* See CE information on page 5

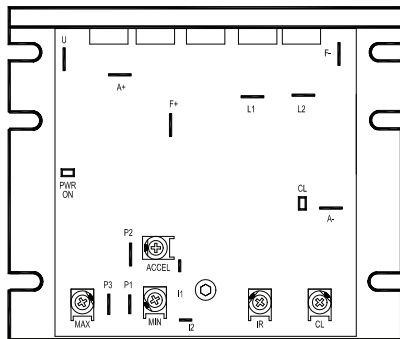

BASIC KBIC®



**This Manual Covers Models
KBIC-120, 125, 240, 225, 240D, 240DS**

PENTA KB POWER™

A COMPLETE LINE OF MOTOR DRIVES

© 2008 KB Electronics, Inc.
(See back cover)

TABLE OF CONTENTS

<u>Section</u>	<u>Page</u>
1 Quick-Start Instructions.....	3
2 Safety	5
3 Introduction	6
4 Application Information	6
5 Installation, Mounting Instructions and Electrical Connections	12
6 Recommended High Voltage Dielectric Withstand Testing (HI-POT)	14
7 Trimpot Adjustments	16
8 Diagnostic LED's.....	20
9 Control Functions.....	20
10 Optional Accessories	23
<u>Table</u>	<u>Page</u>
1 Field Connections (Shunt-Wound Motors Only)	8
2 Electrical Ratings	8
3 Minimum Supply Wire Size Requirements	9
4 Fuse Selection Chart	9
5 General Performance Specifications	10
6 Plug-In-Horsepower Resistor Chart	11
7 RFI Filter Selection	24
<u>Figure</u>	<u>Page</u>
1 General Connection Diagram.....	4
2 Mechanical Specifications.....	7
3 HI-POT Test Setup	15
4 ACCEL Trimpot Range	16
5 MIN Trimpot Range	17
6 MAX Trimpot Range	17
7 CL Trimpot Range.....	18
8 IR Trimpot Range.....	19
9 Dynamic Braking.....	20
10 Master / Follower Circuit Connection	21
11 Connection Methods	22
12 Internal Sensing	23

1 QUICK-START INSTRUCTIONS

Important: You must read these simplified instructions before proceeding. These instructions are to be used as a reference only and are not intended to replace the details provided herein. You must read the Safety Warning on, page 5, before proceeding.


See Figure 1, on page 4. Also see Section 3 - Application Information, on pages 6 and 7.



WARNING! Disconnect main power before making connections to the speed control.

- 1.1 Be sure the AC input line voltage corresponds to the control voltage. See Table 2, on page 8.
- 1.2 Install the correct Plug-In Horsepower Resistor[®] according to armature voltage and motor horsepower. See Table 6, on page 11.
- 1.3 Recheck connections: AC line to L1 and L2, armature to A+ and A- and Field (Shunt motors only) to F+ and F-. (Note: If motor runs in improper direction, interchange armature leads with Main Power disconnected.) See Figure 1, on page 4.
- 1.4 It is recommended that both AC line and armature fuses be installed. See Table 4, on page 9.

FIGURE 1. GENERAL CONNECTION DIAGRAM

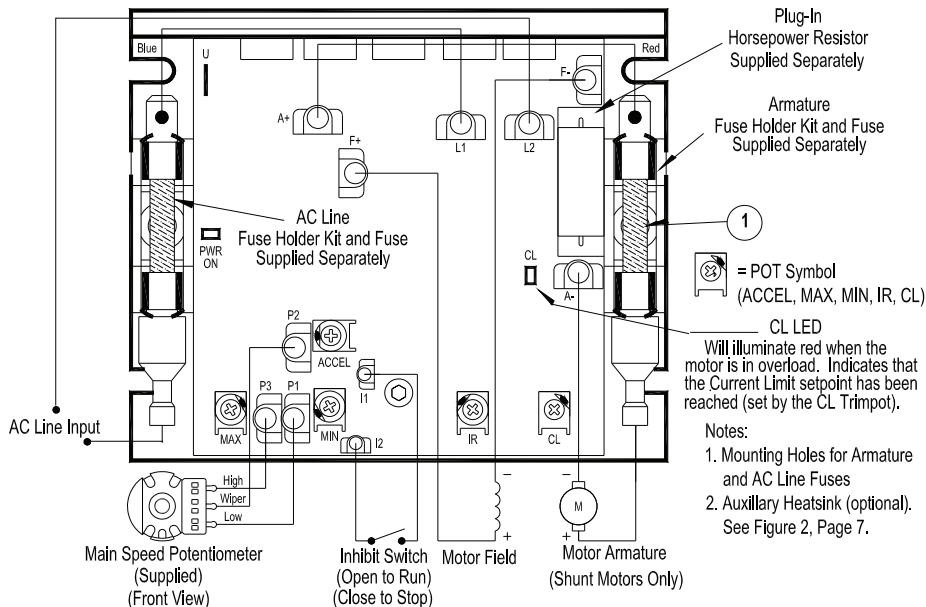

2 SAFETY WARNING

Definition of Safety Warning Symbols



Electrical Hazard Warning Symbol: **Failure to observe this warning could result in electrical shock or electrocution.**



Operational Hazard Warning Symbol: Failure to observe this warning could result in serious injury or death.



This product should be installed and serviced by a qualified technician, electrician, or electrical maintenance person familiar with its operation and the hazards involved. Proper installation, which includes electrical connections, fusing or other current protection, and grounding, can reduce the chance of electrical shocks, and/or fires, in this product or products used with this product, such as electric motors, switches, coils, solenoids, and/or relays. Do not use this drive in an explosion-proof application. Eye protection must be worn and insulated adjustment tools must be used when working with drive under power. This product is constructed of materials (plastics, metals, carbon, silicon, etc.) which may be a potential hazard. Proper shielding, grounding, and filtering of this product can reduce the emission of radio frequency interference (RFI) which may adversely affect sensitive electronic equipment. It is the responsibility of the equipment manufacturer and individual installer to supply this Safety Warning to the ultimate end user of this product. (SW 1/2006)

This drive contains electronic Start/Stop circuits, which can be used to start and stop the drive. However, these circuits are never to be used as safety disconnects since they are not fail-safe. Use only the AC line for this purpose.

Be sure to read and follow all instructions carefully. Fire and/or electrocution can result due to improper use of this product.



This product complies with all CE directives pertinent at the time of manufacture. Contact the Sales Department for Declaration of Conformity. Installation of a CE approved RFI filter is required (see Table 7, on page 24). Additional shielded cable and/or AC line cables may be required along with a signal isolator (SI-5 (Part No. 9443)).

3 INTRODUCTION

Thank you for purchasing the KBIC® "Standard of the Industry" DC motor speed controls. The speed controls are designed for applications demanding good performance, high reliability and low cost. The controls are fabricated with components that have proven reliability, including MOV transient protection, which is used to protect the Power Bridge. Integrated circuitry is used to provide an uncomplicated design with superior load and line voltage regulation. The Direct-Fed™ current limit circuit protects the motor and control against overloads by limiting the maximum level of output current. It also prevents motor failure due to demagnetization of the magnets of PM motors. Acceleration start (adjustable from 0.5 to 4 seconds) provides a smooth start each time the AC power is applied.

A unique feature of the KBIC® control is the Plug-in Horsepower Resistor®. It eliminates the need to recalibrate IR Comp. and CL when the control is used over a wide range of motor horsepower. Additional versatility is achieved by using the Auxiliary Heat Sink (optional) which is used to double the horsepower rating of each model. The output of the control is a linear function of potentiometer rotation. The KBIC® can also be operated in a voltage following mode by supplying an isolated analog signal (0-7 VDC) to the input terminals P2 (+) and F-. If an isolated input signal is not available, the optional Barrier Terminal Board Signal Isolator (SI-5) can be used. The controls are terminated as standard with Q-D terminals provided. A Barrier Terminal Board is available, which includes both line and armature fuse holders.

The Inhibit™ circuit (Terminals I1 and I2) are provided to electronically disconnect the armature output voltage. Another standard feature is Auto Inhibit. This circuit prevents false starts and high surge currents when cycling the KBIC® control with the AC line. All models are UL Listed for the USA and Canada and are CE approved.

4 APPLICATION INFORMATION

4.1 Motor Type – The KBIC® is designed for Permanent Magnet (PM), Shunt Wound and Universal (AC/DC) motors. Controls operated on 115 volt AC inputs are designed for 90 volt SCR rated motors. Controls operated on 230 volt AC inputs are designed for 180 volt SCR rated motors. Use of higher voltage motors will result in reduction of available maximum (MAX) speed (Trimpot Adjustment). Also, if motor is not an SCR rated type, the actual AC line amperage at full load should not exceed the motor's DC nameplate rating.

4.2 Torque Requirements – When replacing an AC induction motor with a DC motor and speed control, consideration must be given to the maximum torque requirements. The full load torque rating of the DC motor must be equal to, or greater than, that of the AC motor.

4.3 Acceleration Start – The KBIC® contains an adjustable acceleration start feature that allows the motor to smoothly accelerate from 0-full speed over a time period of 0.5-4 seconds. The "ACCEL" is factory set at 2 seconds.

4.4 Limitation in Use – The KBIC® controls are designed for use on machine applications.

4.5 Armature Switching – Do not switch the armature without taking proper precautions. (Refer to Armature Switching and Dynamic Braking, Section 9.2 on page 20).

CAUTION! Consult factory before using on constant horsepower applications such as saws or drill presses. Do not use in explosive atmosphere. Be sure the KBIC® is used within its maximum ratings. Follow all installation instructions carefully (Refer to Section 5, on page 12).

FIGURE 2. MECHANICAL SPECIFICATIONS

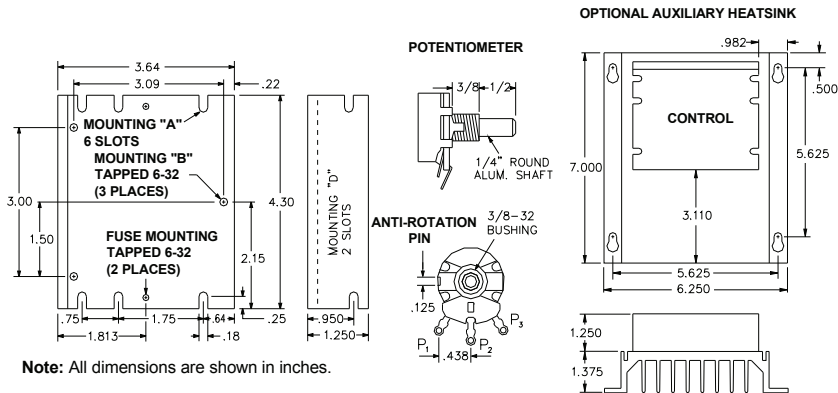


TABLE 1. FIELD CONNECTIONS (SHUNT-WOUND MOTORS ONLY)

CAUTION Shunt-wound motors may be damaged if field remains energized with the motor stopped for an extended period of time, unless provided with external cooling.	AC LINE VOLTAGE	FIELD VOLTAGE (VDC)	FIELD CONNECTION	FIELD TYPE
	115	100	F+, F-	Full Voltage
	115	50	F+, L1	Half Voltage
	230	200	F+, F-	Full Voltage
	230	100	F+, L1	Half Voltage

TABLE 2. ELECTRICAL RATINGS

Model No.	Part No.	AC Line Voltage (VAC) +/- 15% 50/60 Hz	Motor Voltage (VDC) (3)	RATING WITHOUT AUXILIARY HEAT SINK			RATING WITH AUXILIARY HEAT SINK			Field Voltage (Shunt Wound Motor Only) (VDC)
				Max. AC Load Current (RMS Amps)	Max. DC Load Current (Avg. Amps)	Max. HP	Max. AC Load Current (RMS Amps)	Max. DC Load Current (Avg. Amps)	Max. HP	
KBIC-120	9429	115	0 – 90	9.0	6.0	0.5	18.0	12.0	1	50, 100
KBIC-125	9433	115	0 – 90	12.0	8.0	0.75	24.0	16.0	1.5	50, 100
KBIC-240	9428	208/230	0 – 180	9.0	6.0	1	18.0	12.0	2	100, 200
KBIC-225	9432	208/230	0 – 180	12.0	8.0	1.5	24.0	16.0	3	100, 200
KBIC-240D (1)	9464	115	0 – 90	9.0	6.0	0.5	18.0	12.0	1	50, 100
		208/230	0 – 180			1			2	100, 200
KBIC-240DS (2)	9423	115, 208/230	0 – 90	9.0	6.0	0.5	18.0	12.0	1	100

Notes: (1) Model KBIC-240D is designed to accept 115 or 230 VAC line input to provide 0 - 130 VDC with a 115 or 230 VAC line and 0 - 220 VDC with a 208/230 VAC line. (2) Model KBIC-240DS is designed to accept 115 or 208/230 VAC line input to provide 0-130 VDC with a 115 or 208/230 VAC line. (3) A higher output voltage can be reached by increasing MAX trimpot setting.

TABLE 3. MINIMUM SUPPLY WIRE SIZE REQUIREMENTS

Maximum Motor Current (DC Amps)	Maximum Motor HP 90 V	Maximum Motor HP 180 V	Minimum Size Wire (AWG) Cu Only	
			Max 50 Foot Run	Max 100 Foot Run
6	0.5	1	16	14
12	1	2	14	12*
16	1.5	3	12	12

*Minimum recommended wire size.

TABLE 4. FUSE SELECTION CHART*

HORSEPOWER		Approx. Motor Current (DC Amps)	Fuse Rating (AC Amps)
90 VDC Motor	180 VDC Motor		
1/100	1/50	0.1	2/10
1/50	1/25	0.2	3/10
1/30	1/15	0.3	1/2
1/20	1/10	0.5	3/4
1/15	1/8	0.7	1
1/10	1/5	1.0	1 – 1/2
1/8	1/4	1.3	2
1/6	1/3	1.7	3
1/4	1/2	2.5	4
1/3	3/4	3.3	5
1/2	1	5.0	8
3/4	1 – 1/2	7.5	12
1	2	10.0	15
1 – 1/2	3	15.0	25

***Note:** Specific applications may require a different fuse value than indicated. This is based on several factors such as ambient temperatures, duty cycle, motor form factor and CL setpoint.

TABLE 5. GENERAL PERFORMANCE SPECIFICATIONS

Speed Range (ratio)	50:1
Load Regulation (% base speed) (0 - full load; 50:1 speed range)	1 *
Line Voltage Regulation (% base speed at full load; 100 - 130 VAC)	1/2 *
Control Linearity (% speed vs. dial rotation)	2
CL/Torque Range (% full load).	0 - 300
ACCEL Time Period (0 - full speed) (seconds)	0.5 - 4.0
MIN Speed Trimpot Range (% full speed)	0 - 30 *
MAX Speed Trimpot Range (% full speed)	50 - 140 *
IR Compensation Trimpot Range (at specified full load) (volts)	0 - 24
Maximum Allowable Ambient Temperature at full rating (° C/° F)	45/113
Maximum Inrush Start Current (Peak DC amps)	3 times CL Setting
Note: * Performance is for the SCR rated PM motors only. Lower performance can be expected with other motor types. Factory setting is for 3% load regulation. To obtain superior regulation. See Section 7, paragraph 7.5 on page 19.	

TABLE 6. PLUG-IN HORSEPOWER RESISTOR CHART (1)

Motor Horsepower (2)		Approx. Motor Current (DC Amps)	Plug-In Horsepower Resistor® Value (Ohms)	Individual Plug-In Horsepower Resistor® P/N
Armature Voltage (90 VDC)	Armature Voltage (180 VDC)			
1/100	1/50	0.1	1.0	9833
1/50	1/25	0.2	0.51	9834
1/30, 1/25	1/15	0.35	0.35	9835
1/20	1/10	0.5	0.25	9836
1/15, 1/12	1/6	0.8	0.18	9837
1/10, 1/8, 1/6	1/4	1.3	0.1	9838
1/4	1/2	2.5	0.05	9839
1/3	3/4	3.3	0.035	9840
1/2	1	5.0	0.025	9841
3/4	1 – 1/2	7.5	0.015	9842
1	2	10.0	0.01	9843
1 – 1/2	3	15.0	0.006	9850
Notes: 1. Motor horsepower and armature voltage must be specified in order to select correct Plug-In Horsepower Resistor®. 2. For motor horsepower not indicated, use lower value Plug-In Horsepower Resistor®.				

A Plug-In Horsepower Resistor®, must be installed to match the KBIC® to the motor horsepower and voltage. See Table 6, above for the correct value. Plug-In Horsepower Resistors® are stocked by your distributor.



Plug-In Horsepower Resistor®

CAUTION – Be sure Plug-In Horsepower Resistor® is inserted completely into the mating socket.

5 INSTALLATION, MOUNTING INSTRUCTIONS AND ELECTRICAL CONNECTIONS



WARNING! DO NOT USE THIS DRIVE IN EXPLOSION-PROOF APPLICATIONS. BE SURE THE DRIVE IS SECURELY MOUNTED.

5.1 Location and Mounting – The KBIC[®] controls should be mounted on a flat surface and located in an area where it will not be exposed to contaminants such as water, metal chips, solvents or excessive vibration. When mounting in an enclosure, the air space should be large enough to provide adequate heat dissipation. The maximum allowable ambient temperature at full rating is 45 °C/113 ° F. Consult factory if more information is required.

5.2 Initial Setup and Wiring.

- a. Install proper size Plug-in Horsepower Resistor[®]. (See Table 6, on page 11).
 - b. The KBIC can be connected to a standard 115V or 230V ($\pm 15\%$) 50/60 Hz AC line based on model selected [Be sure the AC input voltage corresponds to the control voltage rating and the motor rating (e.g. 90-130VDC motor on 115VAC and 180VDC motor on 230VAC)].
 - c. Follow the recommended supply wire sizes as per Table 3, on page 9.
 - d. Follow the NEC and other electrical codes that apply.
- CAUTION:** Separate branch protection must be provided on 230V circuits. Do not fuse neutral or grounded conductors.
- e. Connect control in accordance to connection diagram. (See Figure 1, on page 4).
 - f. When using a step-down transformer (440 VAC to 230 VAC) be sure the VA rating of the transformer is at least 3 times the VA rating of the motor.



WARNING! READ SAFETY WARNING, ON PAGE 5, BEFORE USING THE DRIVE. DISCONNECT MAIN POWER BEFORE MAKING CONNECTIONS TO THE DRIVE. TO AVOID ELECTRIC SHOCK, BE SURE THE DRIVE AND MOTOR ARE PROPERLY GROUNDED.



WARNING! IF CONTROL IS WIRED TO A TRANSFORMER, DO NOT SWITCH THE PRIMARY SIDE OF TRANSFORMER TO DISCONNECT POWER OR CATASTROPHIC FAILURE CAN RESULT. ALWAYS DISCONNECT CONTROL FROM SECONDARY SIDE OF TRANSFORMER.



WARNING! ARMATURE SWITCHING. DO NOT SWITCH THE ARMATURE IN AND OUT OF CIRCUIT OR CATASTROPHIC FAILURE WILL RESULT. IF ARMATURE SWITCHING IS REQUIRED FOR DYNAMIC BRAKE OR REVERSING, USE MODEL KBRG, KBPB OR KBCC-R SUFFIX CONTROLS.

CAUTION: Do not bundle potentiometer connections (P1, P2, P3) and Inhibit™ connections (I1, I2) with AC line or motor wires.

Note: (Shunt motors only) For 90VDC motors with 50VDC fields and 180VDC motors with 100VDC fields, use half voltage field connections F+ and L1. (See Table 1, on page 8).

5.3 Fusing (AC Line and Armature) – The AC line fuse protects the control against catastrophic failure. If the fuse blows, the control is mis-wired, the motor is shorted or grounded, or the KBIC® control is defective. The armature fuse provides overload protection for the motor and control. Choose the proper size armature fuse and AC line fuse by multiplying the maximum DC motor amps by 1.7. (Armature and AC line fuse kits are available from your distributor). On domestic 230 Volt AC lines, separate branch circuit protection for each line must be used. All fuses should be normal blow ceramic 3AG or MDA or equivalent. See Fuse Chart, Table 4, on page 9.

Note: Also available, the Barrier Terminal Kit (optional), which contains pre-wired AC line and armature fuseholders. Contact your distributor.

6 RECOMMENDED HIGH VOLTAGE DIELECTRIC WITHSTAND TESTING (HI-POT)

Testing agencies such as UL, CSA, etc., usually require that equipment undergo a hi-pot test. In order to prevent catastrophic damage to the control, which has been installed in the equipment, it is recommended that the following procedure be followed. A typical HI-POT test setup is shown in Figure 3, on page 15. All controls have been factory hi-pot tested in accordance with UL requirements.




WARNING! WHEN PERFORMING THE HI-POT TEST, DISCONNECT THE AC POWER.

- 6.1 Connect all equipment AC power input lines together and connect them to the H.V. lead of the HI-POT Tester. Connect the RETURN of the HI-POT Tester to the frame on which the control and other auxiliary equipment are mounted. Refer to Figure 3, on page 15, for further information.
- 6.2 The HI-POT Tester must have an automatic ramp-up to the test voltage and an automatic ramp-down to zero voltage.

Note: If the Hi-Pot Tester does not have automatic ramping, then the HI-POT output must be manually increased to the test voltage and then manually reduced to zero. This procedure must be followed for each machine to be tested. A suggested HI-POT Tester is Slaughter Model 2550.

CAUTION! Instantaneously applying the HI-POT voltage will cause irreversible damage to the control.

FIGURE 3. HI-POT TEST SETUP

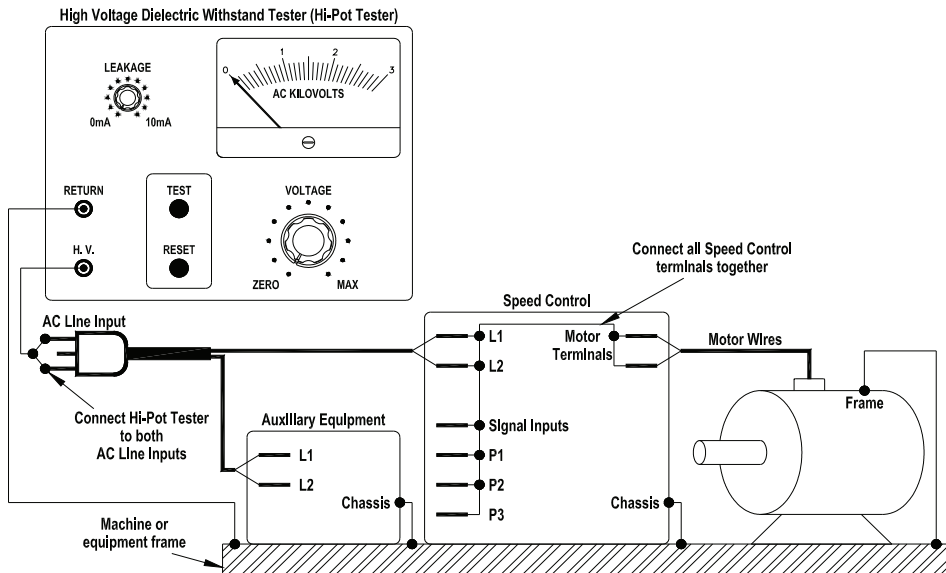

7 TRIMPOT ADJUSTMENTS AND CONTROL FUNCTIONS

The KBIC[®] is factory adjusted to provide 0 to full speed range using a 5K potentiometer. Minimum and maximum speed trimpots are provided to change the speed range from other than 0 to full speed. An acceleration (ACCEL) trimpot (located directly behind the MIN trimpot) is factory set to provide motor acceleration from 0 to full speed over a time period of 2 seconds (approx.) each time the AC power is applied. The current limiting (CL, or torque output) adjustment is factory set to approximately one and a half times the motor rating. The IR Compensation (IR) is factory adjusted to provide excellent motor regulation under normal operation. See Figure 1, on page 4, for trimpot locations.

Note: In order for the IR comp and CL trimpot settings to be correct, the proper Plug-in Horsepower Resistor[®] must be installed for the particular motor and input voltage being used. Do not attempt to change the settings of the trimpots unless absolutely necessary since they are factory adjusted to near optimum settings.

IMPORTANT NOTE:

Readjusting the ACCEL time will affect the MAX speed and IR Comp. settings that will have to be readjusted (see this Section). If the ACCEL time is decreased to the minimum time of 0.5 seconds (6 o'clock trimpot position), then increase the IR trimpot 25% CW rotation and decrease the MAX trimpot 20% CCW rotation. If the ACCEL time is increased to the maximum time of 4 seconds (full rotation), then decrease the IR and increase the MAX as per above percentages of rotation.


The following procedure is presented in required order of adjustment. It should be followed when readjusting all trimpot functions:

7.1 Acceleration Trimpot (ACCEL)

The ACCEL Trimpot is provided, to allow for a smooth start over an adjustable time period, each time the AC power is applied or the Main Speed Potentiometer is adjusted to a higher speed.

The ACCEL Trimpot has been factory set to 2 seconds, which is the amount of time it will take for the motor to accelerate from zero speed to full speed. To increase the acceleration time, rotate the ACCEL Trimpot clockwise. To decrease the acceleration time, rotate the ACCEL Trimpot counterclockwise. See Figure 4.

FIGURE 4. ACCEL TRIMPOT RANGE

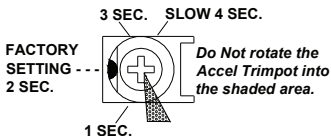

7.2 Maximum Speed Trimpot (MAX)

The MAX Trimpot sets the maximum speed of the motor when the Main Speed Potentiometer is set fully clockwise. The MAX Trimpot is factory set to 100 % of base motor speed. To increase the maximum speed, rotate the MAX Trimpot clockwise. To decrease the maximum speed, rotate the MAX Trimpot counterclockwise. See Figure 5.


Note: Do not attempt to adjust the MAX speed above the rated motor RPM, since unstable motor operation may occur. For moderate changes in the MAX speed, there will be a slight effect on the MIN speed setting when the MIN speed is set at zero. There may be significant variation in the MIN speed setting if the MIN speed is at a higher than zero setting.

7.3 Minimum Speed Trimpot (MIN)

The MIN speed trimpot sets the minimum speed of the motor when the Main Speed Potentiometer is set fully counterclockwise. The MIN Trimpot is factory set to 0 % of base motor speed. To increase the minimum speed, rotate the MIN Trimpot clockwise. To decrease the minimum speed, rotate the MIN Trimpot counterclockwise. See Figure 6.


Note: Readjusting the MIN Trimpot will affect the maximum speed setting. Therefore, it is necessary to readjust the MAX Trimpot if readjusting the MIN Trimpot. It may be necessary to repeat these adjustments until both the minimum and maximum speeds are set to the desired levels.

FIGURE 5. MAX TRIMPOT RANGE



(Factory Set to 100% Base Speed)

FIGURE 6. MIN TRIMPOT RANGE



(Factory Set to 0% Base Speed)

7.4 Current Limit Trimpot (CL)

The CL Trimpot sets the current limit (overload), which limits the maximum current (torque) to the motor. The CL also limits the AC line inrush current to a safe level during startup. The CL Trimpot is factory set to 1.5 times the full load rating of the motor. To increase the current limit, rotate the CL Trimpot clockwise (do not exceed 2 times (200%) motor current rating (maximum clockwise position)). To decrease the current limit, rotate the CL Trimpot counterclockwise. See Figure 7.

Note: The correct value Plug-In Horsepower Resistor® must be installed for the CL to operate properly. Calibration of the CL Trimpot is normally not required when the proper Plug-In Horsepower Resistor® is installed.

To Recalibrate the CL Trimpot:

1. Disconnect the AC power and wire a DC ammeter in series with either motor armature lead.

Note: If only an AC ammeter is available, wire it in series with either AC line input lead.

2. Re-Apply power.
3. Set the Main Speed Potentiometer to approximately 30 - 50 % clockwise position.
4. Set the CL Trimpot fully counterclockwise.
5. Lock the motor shaft. The CL LED will illuminate red.




WARNING - DO NOT LEAVE MOTOR SHAFT LOCKED FOR MORE THAN 2-3 SECONDS OR MOTOR DAMAGE MAY RESULT.

6. Rotate the CL Trimpot clockwise until the desired current reading is observed on the DC ammeter. Factory Current Limit setting is 1.5 times the full load rating of the motor (with a DC ammeter wired in series with the motor armature). If using an AC ammeter wired in the AC line input, set the CL 0.75 times the full load rating of the motor. Do not exceed 2 times motor current rating. Refer to Figure 7.

Note: On cyclical loads, it may be normal for the CL LED to momentarily flash.

FIGURE 7. CL TRIMPOT RANGE

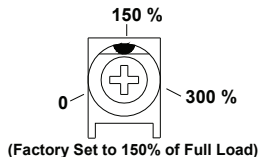

7.5 IR Compensation Trimpot (IR):

IR compensation is provided to substantially improve load regulation. If the load presented to the motor does not vary substantially, the IR adjustment may be set at a minimum level (approximately 1/4 of full setting). The control is factory adjusted to approximately 3% regulation. If superior performance is desired (less than 1% speed change of base speed from 0 to full load), then the IR compensation should be adjusted (See Figure 8) as follows:


Note: Excessive IR comp. will cause control to become unstable, which causes motor cogging.

Notes: 1. The correct value Plug-In Horsepower Resistor[®] must be installed for the IR Compensation to operate properly. Calibration of the IR Trimpot is normally not required when the proper Plug-In Horsepower Resistor[®] is installed. (Actual Comp. voltage depends on the value of the Horsepower Resistor[®]) 2. Excessive IR Compensation will cause the motor to become unstable, which causes cogging.

To Recalibrate the IR Trimpot:

1. Set the IR Trimpot to approximately 25% rotation.
2. Run the motor unloaded at approximately 1/3 speed and record the RPMs.
3. Run the motor with the maximum load and adjust the IR Trimpot so that the motor speed under load equals the unloaded speed recorded in step 2.
4. Remove the load and recheck the RPMs.
5. If the unloaded RPM has changed, repeat steps 2 - 4 for more exact regulation. The control is now compensated to provide minimal speed change due to changing loads.

FIGURE 8. IR TRIMPOT RANGE



(Factory Set to 3 Volts DC for
Controls with 90 Volt DC Output)
(Factory Set to 6 Volts DC for
Controls with 180 Volt DC Output)

8 DIAGNOSTIC LED'S

The KBIC™ is designed with PC board mounted LEDs to display the control's operational status. See Figure 1, on page 4, for the location of the LEDs.

8.1 Power On (PWR ON):

The PWR ON LED will illuminate green when the AC line is applied to the control.

8.2 Current Limit (CL):

The CL LED will illuminate red when the control goes into current limit, indicating that the current limit set point has been reached (set by the CL Trimpot). See Section 7.4, and Figure 7, on page 18.


9 CONTROL FUNCTIONS

9.1 AC Line Switching:

The control can be turned "on" and "off" using the AC line (no waiting time is required). Auto-Inhibit® circuitry automatically resets critical components each time the AC line is interrupted. This, along with Acceleration Start and CL, provides a smooth start each time the AC line is applied.

9.2 Armature Switching – If the armature is to be disconnected and reconnected with AC power applied, the Inhibit Circuit™ must be simultaneously activated and deactivated. Connect I1 and I2 together to activate the Inhibit Circuit™. See Figure 9.

FIGURE 9. DYNAMIC BRAKING CIRCUIT

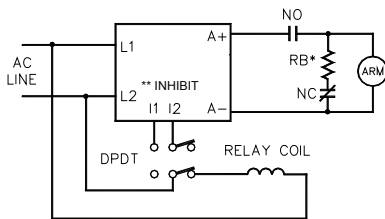

Notes: (Dynamic Brake Circuit)

* Choose RB resistance and wattage according to braking requirements.


** Inhibit™ circuit extinguishes output of control during brake. When the armature is reenergized, the inhibit™ releases which allows for a smooth start.

9.4 Voltage Following – All models can be controlled with an isolated analog reference voltage (0 -7 VDC) in lieu of the main speed potentiometer. The voltage is connected to P2 (+) and F-. The control output voltage will linearly follow the input voltage. The source impedance of the input should be 10K ohms or less. The Min and Max trimpots are rendered inoperative in the voltage following mode. Use auxiliary trimpots for scaling and to limit the control range. If the input signal is not isolated, or is a current signal (4 - 20 mA), the KBSI-240D or SI-5 Barrier Terminal Board Signal Isolator must be used. It will allow direct connection to process controllers and microprocessors.

CAUTION: The voltage feeding P2 and F- must be isolated from the AC line. Do not earth ground P2 or F- to setup a zero or ground reference. **2.** Do not bundle signal wires to P2 and F- with AC line or motor connections. If signal wires are over 18 inches, use shielded cables.


9.5 Connection Methods – Additional methods for motor connections may be used. See Figure 11.

FIGURE 11. CONNECTION METHODS

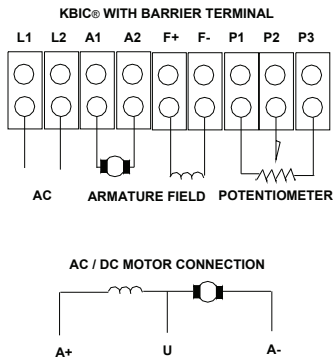

9.6 Optional Overload Protection with KBAP-240D (Part No. 9106)

The KBAP-240D® is a multipurpose DC Current Sensing Relay and Overload Protector. It is specifically designed for use with DC motors and speed controls from 1/8 - 3 HP. KBAP-240D® operates by sensing current in the armature circuit. When the preset level is reached, the output relay (RY1) trips. An adjustable time delay (0.2 - 15 secs.) is incorporated, which eliminates nuisance tripping. Manual or automatic reset is provided at the user's option along with a LED, which indicates when the preset current level has been reached. When an overload occurs, the KBAP-240D® can be used to shut the system down, sound an alarm, or initiate corrective action before damage occurs. Refer to Figure 12.

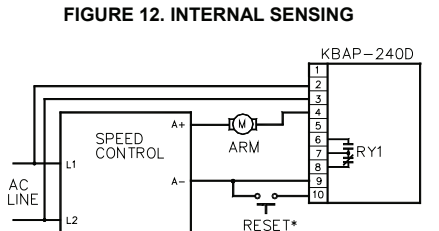

Internal Sensing Circuit -

Wire the KBAP® in accordance with this wiring diagram.

10 OPTIONAL ACCESSORIES

- **Auxiliary Heat Sink (Part No. 9861):** Doubles the horsepower rating of the control.
- **Barrier Terminal Accessory Kit (Part No. 9863):** When used with the Auxiliary Heat Sink, it converts the quick-connect terminals of the control to a barrier terminal block.
- **Barrier Terminal Board (Part No. 9884):** Converts the quick-connect terminals of the control to a barrier terminal block. Contains PC board mounted line and armature fuse holders (fuses supplied separately). Plugs onto the quick-connect terminals of the control.
- **SI-5 Signal Isolator (Part No. 9443):** Provides isolation between non-isolated signal sources and the control. Plugs onto the quick-connect terminals of the control.
- **Dial Plate & Knob Kit (Part No. 9832):** Provides indication of the Main Speed Potentiometer position (0 - 100 %).
- **AC Line & Armature Fuse Kit (Part No. 9849):** Provides fusing for the AC line input and armature. Includes wired fuse holders and mounting screws. Fuses supplied separately.

OPTIONAL ACCESSORIES (CONTINUED)

- **DIN Rail Mounting Kit (Part No. 9995).**
- **KBAP-240D Current Sensing Overload Protector (Part No. 9106):** Provides overload current sensing and protection of DC motors and speed controls rated 1/8 - 3 HP by sensing armature current. Operates on 115 or 208/230 Volt AC line input.
- **KBEP-240D Electronic Potentiometer (Part No. 9108):** Provides digital type control of motor speed. Replaces a standard rotary potentiometer with a set of customer supplied momentary push buttons or membrane switches.
- **KBET-240D Electronic Tachometer (Part No. 9469):** Provides an isolated tach-feedback signal and an isolated voltage follower signal from an open collector (Hall, magnetic, inductive, and optical) or 2-wire inductive pickup (encoder). Operates on 115 or 208/230 Volt AC line input.
- **RFI Filters:** Provide RFI and EMI suppression. Rated for 208/230 Volt 50/60 Hz AC. Complies with CE Council Directive 89/336/EEC relating to the Class A Industrial Standard and Class B Residential Standard. Filters are available in remote or undermount types. See Table 7.

TABLE 7. RFI FILTER SELECTION

Model No.	Part No.	Current Rating (RMS Amps)	Mounting	CE Class
KBRF-200A	9945C	24	Remote	A - Industrial
KBRF-250	9509	10	Undermount	A - Industrial
KBRF-300	9484	16	Remote	B – Residential *
KBRF-350	9511	10	Undermount	B – Residential *

* Also meets industrial standard.

Notes:

Notes:

Notes:

LIMITED WARRANTY

For a period of 18 months from the date of original purchase, KB Electronics, Inc. will repair or replace without charge, devices which our examination proves to be defective in material or workmanship. This warranty is valid if the unit has not been tampered with by unauthorized persons, misused, abused, or improperly installed and has been used in accordance with the instructions and/or ratings supplied. The foregoing is in lieu of any other warranty or guarantee, expressed or implied. KB Electronics, Inc. is not responsible for any expense, including installation and removal, inconvenience, or consequential damage, including injury to any person, caused by items of our manufacture or sale. Some states do not allow certain exclusions or limitations found in this warranty and therefore they may not apply to you. In any event, the total liability of KB Electronics, Inc. under any circumstance shall not exceed the full purchase price of this product. (rev. 2/2002)

COPYRIGHT © 2008 KB Electronics, Inc.

All rights reserved. In accordance with the United States Copyright Act of 1976, no part of this publication may be reproduced in any form or by any means without permission in writing from KB Electronics, Inc. (8/2002)

The information contained in this brochure is intended to be accurate. However, the manufacturer retains the right to make changes in design which may not be included herein.



KB ELECTRONICS, Inc.

12095 NW 39th Street, Coral Springs, FL 33065 • (954) 346-4900 • Fax (954) 346-3377
Outside Florida, Call TOLL FREE (800) 221-6570 • Email – info@kbelectronics.com •
www.kbelectronics.com

BALDOR

BALDOR ELECTRIC COMPANY

P. O. BOX 2400 • FORT SMITH, ARKANSAS 72902-2400 U.S.A. • (479) 646-4711 • FAX (479) 648-5792

RATIO MULTIPLIER INSTALLATION, LUBRICATION AND OPERATION INSTRUCTION

These instructions must be read thoroughly before installing or operating speed reducers. File instructions for future reference.

CAUTION

- For safe operation of any gear drive, all rotating shafts and auxiliary components must be shielded to conform with applicable safety standards. You must consider overall operational system safety at all times.
- When using a speed reducer to raise or lower a load, such as in hoisting applications, provision must be made for external braking. Under no conditions should a speed reducer be considered self-locking.
- Mounting of speed reducers in overhead positions may be hazardous. Use of external guides or supports is strongly recommended for overhead mounting.

GENERAL INSTRUCTIONS

Align all shafts accurately. Improper alignment can result in failure. Use of flexible coupling is recommended to compensate for slight misalignment.

Auxiliary drive components (such as sprockets, gears and pulleys) should be mounted on the shafts as close as possible to the housing to minimize effects of overhung loads. Avoid force fits that might damage bearings or gears.

Gear drives are nameplated for 1750 RPM Input Speed and Class I Service. For lower Input Speeds and other Service Classes, consult the factory.

INSTALLATION

Baldor Ratio Multipliers are ready for installation as removed from the carton. Each Ratio Multiplier has been filled with Klubersynth GH6-460 synthetic lubricant at the factory. The oil quality is sufficient for any mounting position. The motor shaft coupling has been prelubricated with Kluber Q NB 50 antiseize.

MOUNTING POSITION

For maximum seal life, the Ratio Multiplier should be mounted with the input shaft as high as possible. ***Mounting the Ratio Multiplier with the input seal vertically down is not recommended.*** If a vertically down input shaft position is required, consult the factory.

LUBRICATION

Oil changes are not required. Oil should only be replaced when maintenance is performed that requires disassembly. If the oil is replaced, use Klubersynth GH6-460. This Lubrication is suitable for a wide temperature range (-31°F to 320°F). However refer to "Operating Environment" section for ambient operating temperature for Baldor ratio multipliers.

(Oil capacity in fluid ounces ***RM1 6.2 oz., RM2 11 oz.***)


Satisfactory performance may be obtained with non-synthetic oils and will require more frequent changes.

OPERATING ENVIRONMENT


Baldor Ratio Multipliers are designed to operate in ambient temperatures of -10°F to 100°F. The oil sump temperatures of the Ratio Multiplier must not exceed 200°F. Consult the factory for applications requiring ambient operating temperature outside this range.

“C” FLANGE – HOLLOW BORE WORM STYLE:

STEP #1. Remove bore plug. Position key in Ratio Multiplier Input Bore. Line up the key with the keyslot and slip the motor shaft into the Ratio Multiplier Input Bore.

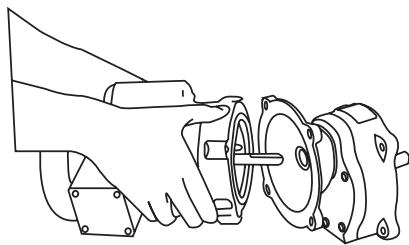

STEP 2. Tighten the supplied 4 bolts with lockwashers evenly for a solid fit between motor and “C” flange.

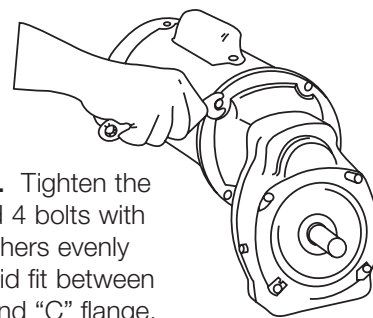

EXTENDED “C” FLANGE WITH FLEXIBLE COUPLING STYLE:


STEP #1: Mount one coupling half on motor shaft so that the coupling half and end of key are flush with end of motor shaft. (See Drawing A)

STEP #2: Tighten coupling setscrews. Thread locking compound is recommended on all coupling setscrews. Measure distance from inner face of coupling to motor mounting surface. (See Drawing A)


STEP #3: Mount other coupling half on the reducer input shaft so the coupling end measures the same distance to the mounting surface of the “C” flange. (See Drawing B) Tighten setscrews. Key should be flush with shaft end. Use pipe plug opening in side of “C” flange to loosen, tighten or make any adjustments in coupling position.

STEP #4: Align coupling halves and install motor.

STEP #5: Rotate motor to required position and tighten the supplied four bolts and lockwashers evenly for a solid fit between motor and “C” flange. Re-install and tighten the pipe plug in the flange access hole.

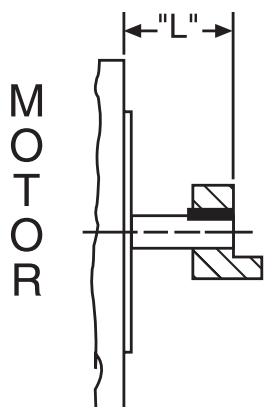

Drawing A

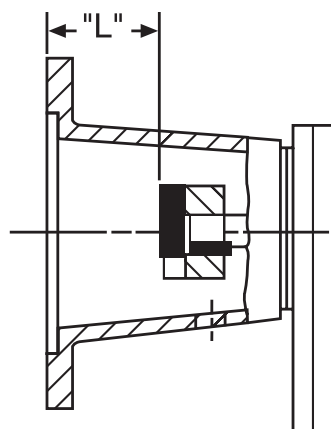

Drawing B

BALDOR® • RELIANCE

Product Information Packet

GCF5X01AA

FX1-05-B5-56C HELICAL GEARS

Nameplate NP1753A04				
INPUT H.P.	1.1			
RATIO	5	R TORQ-INLB	194	
	FX1-05-B5-56C			
CAT./SPEC	GCF5X01AA			GR0222C026
DATE CODE				

Parts List		
Part Number	Description	Quantity
HG0020A08	RM1 STD HOUSING BODY	1.000 EA
HW4001A05	1/8 HX SOC PIPE PLG(F/S)	1.000 EA
SG0025A14	RM1Q HELICAL PINION SHAFT ASSY, 5:1, 5/8	1.000 EA
HW5002A48	RET RING N5002 - 137 (WALDES) BEVELED 35	1.000 EA
SG0024A22	RM1 HELICAL OUTPUT GEAR SHAFT ASSY, 5:1	1.000 EA
HW3064G05	3/16 X 1/2 PIN DRIV-LOK TYPE H, HI-ALLOY	2.000 EA
HG0021A02	RM1 STD HOUSING COVER	1.000 EA
10XN2520K20	1/4-20 X 1.25" HX HD SCRWGRADE 5, ZI	4.000 EA
HW1001A25	LOCKWASHER 1/4, ZINC PLT .493 OD, .255 I	4.000 EA
GF0019A01	RM1Q 56C INPUT FLANGE	1.000 EA
HW4600D20	SEAL 1.250 X 1.687 X 0.250 SGL LIP,	1.000 EA
10XN2520K32	1/4-20 X 2.00 HX HD SCRW GRADE 5, ZINC P	2.000 EA
10XN2520K18	1/4-20 X 1-1/8 HEX CAP SCREW, GRADE 5	2.000 EA
HW1001A25	LOCKWASHER 1/4, ZINC PLT .493 OD, .255 I	4.000 EA
HW4600D21	SEAL, 0.750 X 1.124 X 0.188 SGL LIP,	1.000 EA
MJ1000B02	KLUB. GH6-460 GEAR OIL 1 LB	0.048 GA
MJ5004A35	ADHESIVE LOCTITE #243-31 50 ML	0.001 EA
MJ5001A19	LOCTITE #598 ULTRA BLACK, 50 LB PAIL, IT	0.010 LB
MG1000G28SPP	S-9282E CHARCOAL GREY 5GAHAZARDOUS CHEM	0.010 GA
LT0066A14	REDUCER RM MAINT FLYER - KLUBER GH6-460	1.000 EA
NP1753A04	NAMEPLATE, GR REDUCER, KLUBER GH6-460	1.000 EA
LB1242	ADHESIVE PATCH 1.10 X 2.03 X .045 THICK	1.000 EA
MJ1000B01	ANTISEIZE - ALTEMP Q NB 50, 750 GRAM CAN	0.001 EA
HA3556A01	WORM BORE PLUG 5/8 BORE, CAPPLUGS 7TX	1.000 EA

Parts List (continued)		
Part Number	Description	Quantity
LB5048A02	TOE TAG, OIL PREFILL (WHITE), GH6-460	1.000 EA
35PA1000	PACKING GROUP	1.000 EA
HW2513A06	KEY .188 X 1.375 1018 STEEL	1.000 EA
HW0003D07	USER H/W PKG - 3/8 BOLT & WASHER	1.000 EA

